GT8 Installation

What's Included

Verify that your GT8 shipment contains the following parts:





GT8

12V Ungrouned Power Adapter

Installing GT8


1. Remove the wall bracket securing screw to release wall bracket from GT8. Keep the screw to be reused in step 6.



2. Place the wall bracket against the wall, mark the 4 screw mount points.



 Mark the preferred cable routing position of the wall bracket. It is recommended to use the lower/larger bracket aperture.

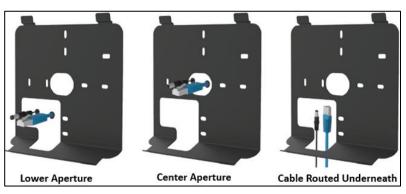

Note: If determines to run cables from underneath, remove the blanking plate from the GT8 back plate.



- 4. Drill holes in the wall and mount the wall bracket with screws. Feed the cables through the aperture of the wall bracket.
- 5. Offer the GT8 close to the wall bracket and connect Ethernet and 12V power cables. Position the GT8 slightly above the wall bracket with its back parallel with the wall and make sure all cables are free to move. Note: If needed, cables may be secured using a cable tie looped through the two indicated slots.



 Centralize the GT8 against the wall bracket and slowly lower the clock by sliding it down the wall until the top of the front panel onto the locating tabs at the top of the back panel.





- 7. With the GT8 fully down and it stops against the wall bracket, secure the wall bracket with the GT8 using the screw from step 1. Press the lower portion of the clock into the wall to make sure it sits snug against the wall.
- 8. Plug the 12V power adapter into the outlet on the wall to reboot the GT8.